

3.4.7 Sending SMS (Using a GSM Modem)

This page allows the user (as administrator) to configure the SMS settings for sending messages to recipients when events occur.

Follow the steps below to add/edit/delete a short message.

1. Connect the GSM modem to interSeptor Pro, as shown below:



Figure 3-17 Connect GSM modem to interSeptor Pro

2. Set the **GSM modem function** to ENABLE.

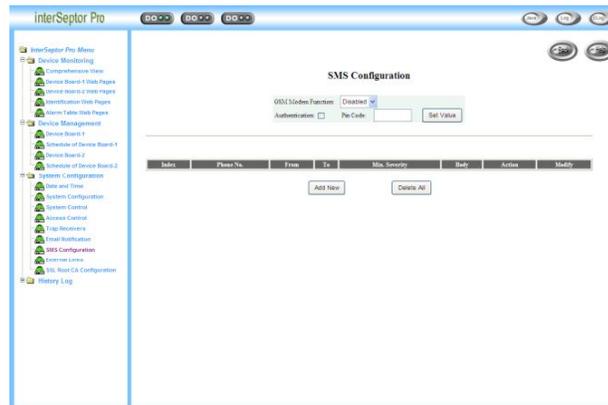


Figure 3-18 SMS configuration page

Configure the following settings to enable/disable the GSM modem:

- **GSM Modem Function:** Choose **Enable/ Disable** to enable or disable the **GSM Modem Function**. Up to twelve phone numbers maximum
- **Authentication and Pin Code:** If the SIM card is locked by PIN code, tick **Authentication** and enter the correct Pin Code into **Pin Code**.
- **Set Value:** Press the **Set Value** button to confirm.



Info: A GSM Modem is required for this functionality. Please ensure that the baud rate for the modem is 38400. Please see **Appendix C**

3. Add a new message for an SMS recipient.

Phone Number:

Duty From: Duty To:

Minimum Severity:

Action:

Body:

Prefix:

Date(DA) Time(TI)

Device Name(DN) IP Address(IP)

Event Message(EM) Severity(SE)

Figure 3-19 New SMS page

Configure the following settings for a new message:

- **Phone Number:** Enter a phone number to send the SMS to.
 - **Duty From and Duty To:** Enter a start and end time and only during this period of time the SMS recipient will be sent SMS messages, when events occur.
 - **Minimum Severity:** Choose the **Information/ Warning/ Severe** to set the minimum level of the event to be received.
 - **Action:** Choose **Enable/ Disable** to enable/ disable sending the message to the SMS recipient.
 - **Body:** Enter the content of the SMS.
 - **Prefix:** Enter the title of the SMS message. 30 characters maximum.
 - **Set Value:** Press **Set Value** to confirm and then the setting is listed on the **SMS configuration** screen.
4. If an SMS message needs to be edited then press **Edit** to configure the messages on the SMS configuration screen. To delete the message press **Delete** or alternatively **Delete All** to remove all recipients.

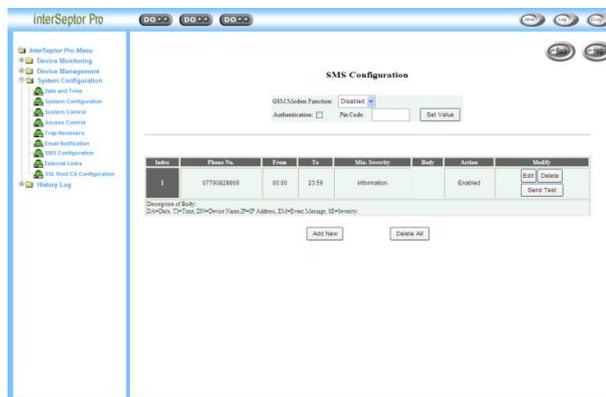


Figure 3-20 SMS configuration page with SMS list